



## Typical Wiring for 3 Output RunLock System

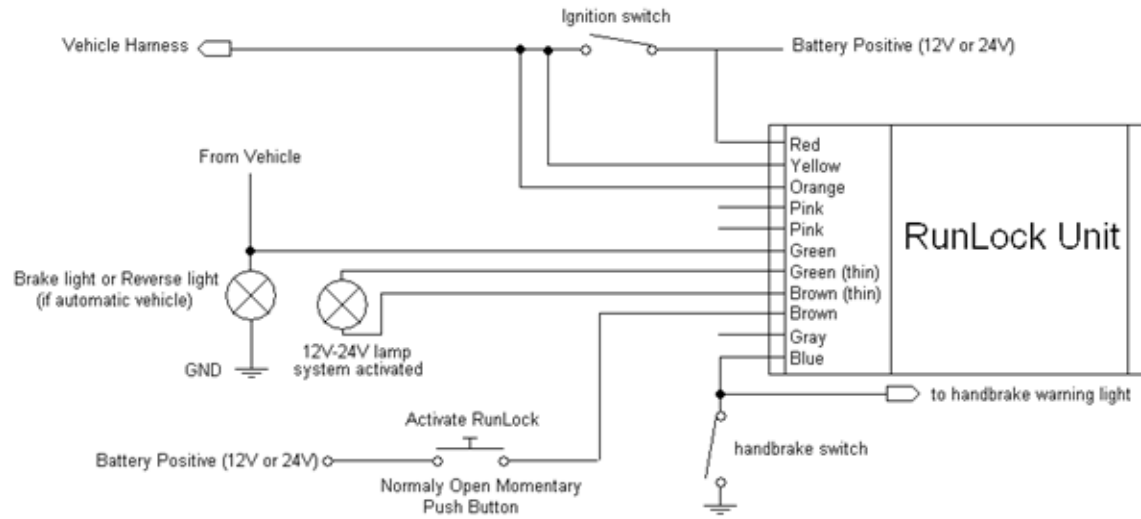

Premier Hazard Limited  
Bessingby Ind. Est.  
Bridlington, YO16 4SJ  
Switchboard: +44(0)113 239111  
Fax : +44(0)113 2391131

Red	Incoming Vehicle Power supply (Battery Positive) 12V or 24V
Yellow	ignition sense wire input
Orange	20A main ignition override output
Pink	6A ignition override output
Pink	6A ignition override output
Green	Brake light sensor input
Green (thin)	to RunLock active LED output
Brown (thin)	to RunLock active LED output
Brown	Runlock Activate input
Gray	to Handbrake Yellow & black wires (volvo only) input
Blue	to Handbrake switch (GND supply to unlock whilst handbrake is on) input

## Typical Wiring for 3 Output RunLock System

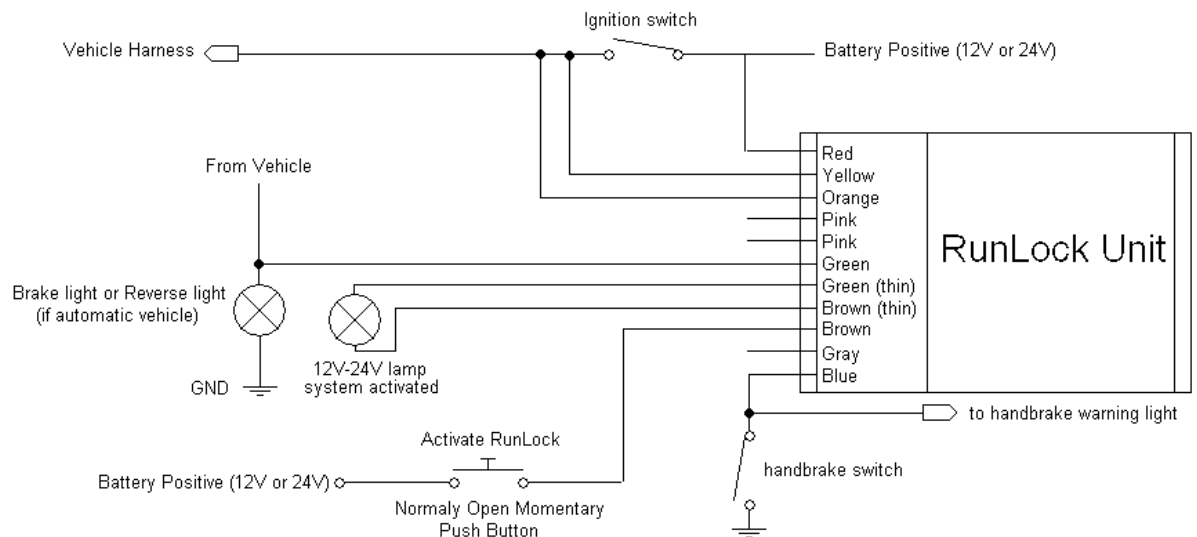

Premier Hazard Limited  
Bessingby Ind. Est.  
Bridlington, YO16 4SJ  
Switchboard: +44(0)113 239111  
Fax : +44(0)113 2391131

Red	Incoming Vehicle Power supply (Battery Positive) 12V or 24V
Yellow	ignition sense wire input
Orange	20A main ignition override output
Pink	6A ignition override output
Pink	6A ignition override output
Green	Brake light sensor input
Green (thin)	to RunLock active LED output
Brown (thin)	to RunLock active LED output
Brown	Runlock Activate input
Gray	to Handbrake Yellow & black wires (volvo only) input
Blue	to Handbrake switch (GND supply to unlock whilst handbrake is on) input